


10-14-14

## How to Program as Trex Lighting Dimmer:

### Dimmer

- Dimmer Remote Range is 30ft
- Extend Antenna for max range
- Remotes can be reprogrammed if lost or broken only if the dimmer remote was latest style
- All controls are duplicated between the remote and the dimmer housing

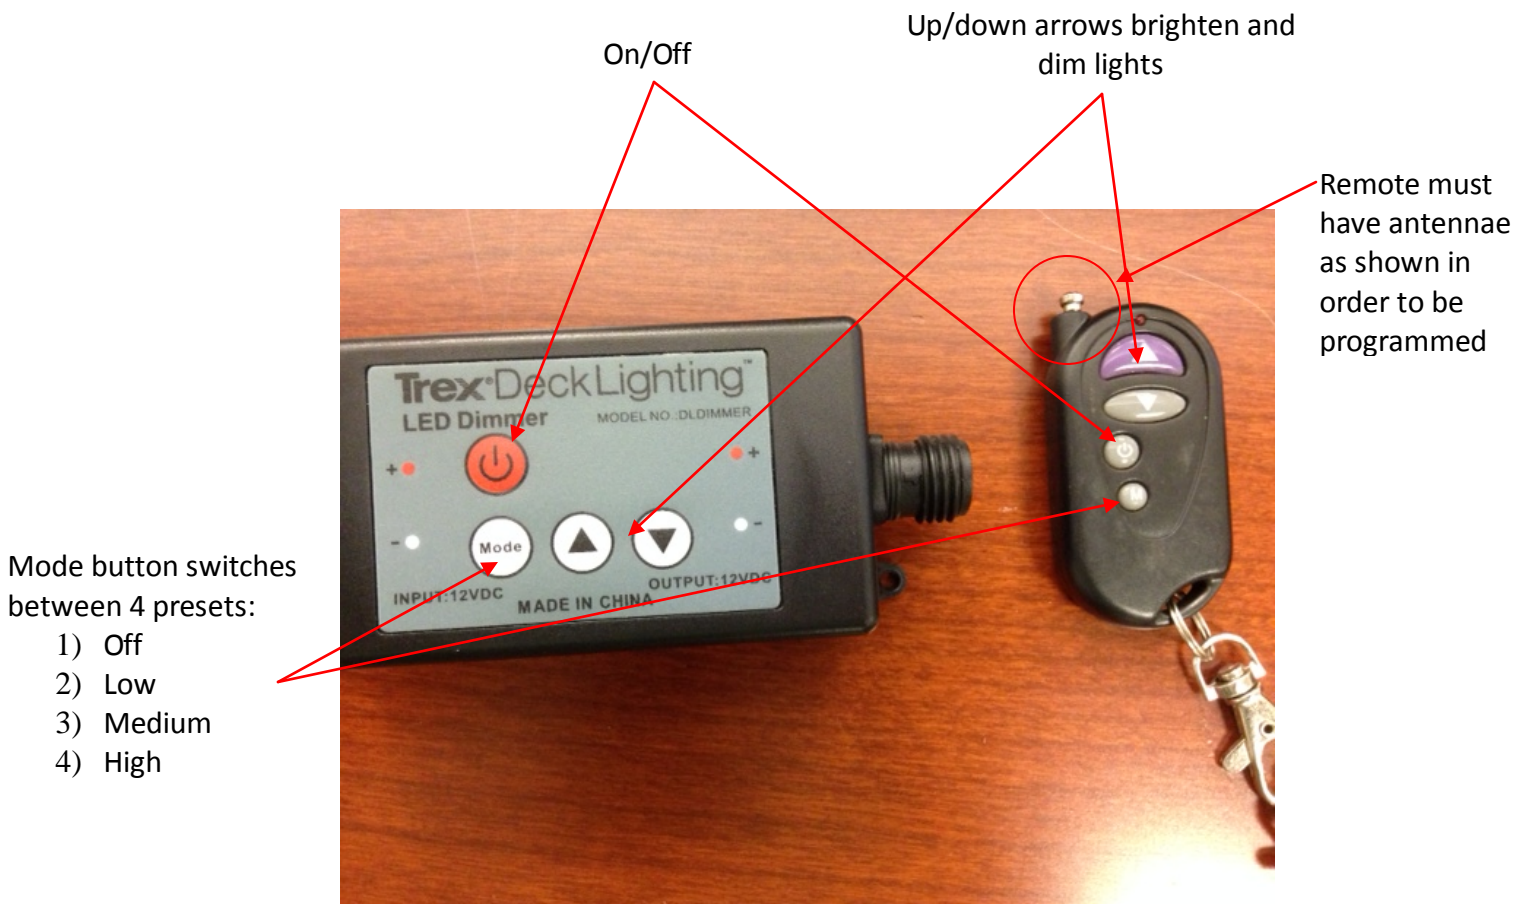

## EZDIMMERWP Remote Programming Instructions

1. Make sure the dimmer is plugged into the transformer and that the light plugged into the dimmer are on.
2. With the lights still on unplug the transformer from the outlet.
3. Allow the lights to shut off
4. Press and hold the up and down arrow buttons on the remote.
5. While holding those buttons plug the transformer back into the outlet.
6. The lights will flash quickly once.
7. Release the up and down arrow buttons.
8. Press the power button on the remote once.
9. The lights should shut off. If the lights shut off after pressing the power button press the power button a few more times to confirm that the lights turn on and off. Your remote is programmed, enjoy.
10. If the lights do not shut off after pressing the power button repeat steps 1 through 8.
11. If after repeating steps 1 through 8 and pressing the power button on the remote does not shut off the lights, try replacing the battery and repeating steps 1 through 8.

Regards,  
Trex Technical Services