


INSTALLATION | SHADOW RAIL CONNECTOR - *STRAIGHT*

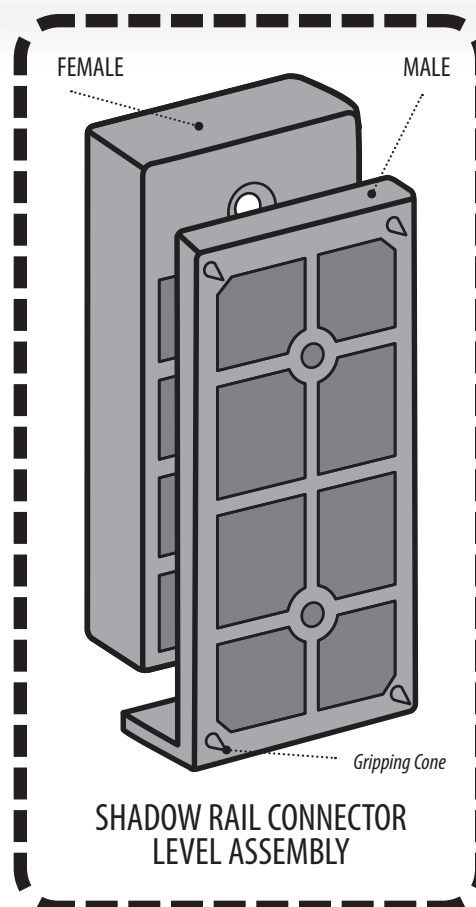

1 START

Mark length of TOP and BOTTOM 2"x4" rails.

Cut 2"x4" RAILS 1-1/2" shorter to accommodate RAIL Connector assemblies.

Fasten FEMALE Connectors to ends of 2"x4" rails with 2" screws.

#10x2"

#10x2"

TOP RAIL

BOTTOM RAIL

2 BOTTOM RAIL INSTALLATION

#10x2"

#10x1"

4" MAX

Press MALE Connector against post to impress Cones and mark position.

Fasten to post with screws.

NOTE: Use 1" screw for lower hole if using Color Guard Post Anchor.

REPEAT FOR OTHER POST.

3

Slide BOTTOM RAIL Into MALE Connectors.

BOTTOM RAIL

4

Slide MALE connectors into FEMALE Connectors of TOP RAIL.

5 TOP RAIL INSTALLATION

Fasten 2 balusters on BOTTOM RAIL to determine desired height of TOP RAIL.

Position TOP RAIL with Connectors into place.

Squeeze the top of posts slightly to leave impressions from gripping cones.

TOP RAIL

BOTTOM RAIL

6

Fasten MALE Connector to top area of wood post using 2" screws.

REPEAT FOR OTHER POST.

#10x2"

#10x2"

7

Install remaining BALUSTERS to BOTTOM RAIL. Slide TOP RAIL down into place to lock up with MALE Connectors.

TOP RAIL

BOTTOM RAIL

8 FINISH

Optional 2"x4" CAP RAIL